



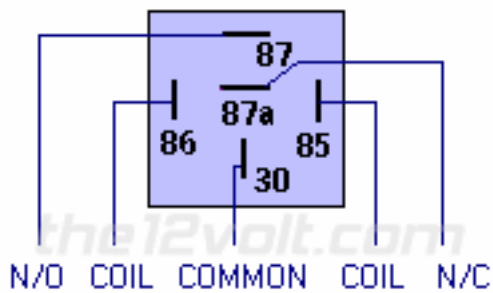

# UNLOCK DOOR WIRING

NOTE: IF USING THE ORANGE LOCK DOOR WIRE/ ENGINE DISABLE WILL NOT WORK  
ORANGE WIRE CAN ONLY BE USED TO LOCK OR DISABLE ENGINE

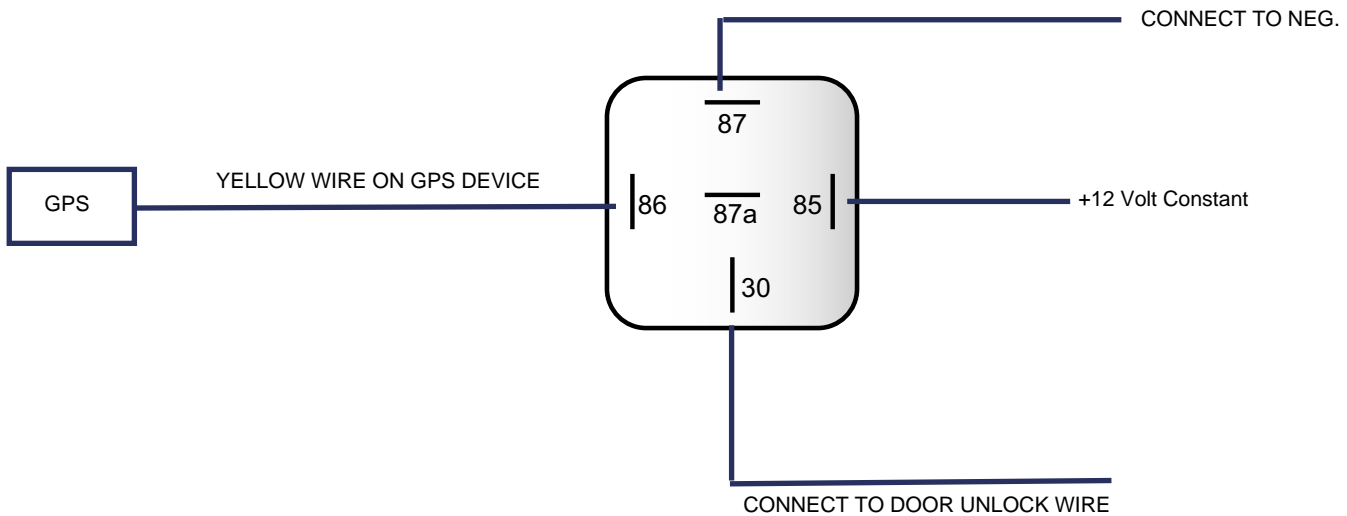

ATTENTION: This wiring information is being provided free of charge and on an "as is" basis, without any representation or warranty. It is your responsibility to verify any circuit before interfacing with it by using a digital multimeter. S&L Services Inc. assumes no responsibility with regards to the accuracy or currency of this information. Proper installation in every case is and remains the responsibility of the installer.

S&L Services Inc. assumes no responsibility resulting from an improper installation, even in reliance upon this information.